

Table of Contents

SECTION 1	Using This Manual	1-1
Introduction	Receiving and Inspection	1-2
	Returning the Product	1-2
	Considerations	1-2
	Limitations	1-2
	Environmental	1-3
SECTION 2	Safety Messages	2-1
Installation	Installation Flowchart and Checklist	2-2
	Mounting	2-4
	Tools and Supplies	2-4
	Mounting Brackets	2-4
	Bolt Installation Guidelines	2-4
	Instrument Manifolds	2-5
	Straight Run Requirements	2-7
	Flowmeter Orientation	2-10
	Remote Mounted Transmitter	2-13
	Flo-Tap Models	2-15
	Installation	2-18
	Pak-Lok Annubar Type (for 485 Annubar Flowmeters)	2-18
	Flanged with Opposite Side Support Annubar Type (for 485 and 585 Annubar Flowmeters)	2-23
	Flange-Lok Model (for 485 Annubar Flowmeters)	2-28
	Threaded Flo-Tap (for 485 Annubar Flowmeter)	2-34
	Flanged Flo-Tap (for 485 and 585 Annubar Flowmeters)	2-40
	Main Steam Line (for 585 Annubar Flowmeters)	2-47
	Wire the Transmitter	2-52
	Wiring Diagrams	2-52
SECTION 3	Safety Messages	3-1
Commissioning	Transmitter Commissioning	3-2
	Commissioning The Annubar	3-2
	Direct Mount Transmitter	3-2
	Remote Mount Transmitter	3-8
SECTION 4	Safety Messages	4-1
Operation and	Troubleshooting	4-1
Maintenance	RTD Maintenance	4-4
	Replacing an RTD	4-4
	Electrical RTD Check Procedure	4-5
	Pak-lok, Flange-lok, and Flo-tap Maintenance	4-7
	Gas Entrapment	4-8
	Dirt Accumulation	4-8
	Main Steam Line Annubar Maintenance	4-10

Annubar Flowmeter Series

APPENDIX A Reference Data

3051SFA Ordering InformationA-1	
Wireless Options (Requires option code X and wireless PlantWeb housing)	A-5
Other Options (Include with selected model number)	A-6
3051SFA Specifications	A-10
3051SFA Performance Specifications	A-10
3051SFA Dynamic Performance	A-10
Mounting Position Effects	A-11
Vibration Effect	A-11
Power Supply Effect	A-11
Electromagnetic Compatibility (EMC)	A-11
Transient Protection (Option T1)	A-11
3051SFA Functional Specifications	A-12
Range and Sensor Limits	A-12
Minimum Span Limits	A-12
Overpressure Limits	A-17
Static Pressure Limits	A-17
Burst Pressure Limits	A-18
Temperature Limits	A-18
Humidity Limits	A-18
Turn-On Time	A-18
Volumetric Displacement	A-18
Damping	A-18
Failure Mode Alarm	A-19
Safety-Certified Transmitter Failure Values	A-19
3051SFA Physical Specifications	A-19
Electrical Connections	A-19
Process Connections	A-19
Process-Wetted Parts	A-19
Non-Wetted Parts	A-20
3051CFA Ordering Information	A-21
Options (Include with selected model number)	A-24
3051CFA Performance Specifications	A-27
3051CFA Functional Specifications	A-27
Range and Sensor Limits	A-27
Zero and Span Adjustment Requirements (HART and Low Power)	A-27
Service	A-27
4–20 mA (Output Code A)	A-27
Foundation fieldbus (output code F) and Profibus (output code W)	A-28
Low Power (Output Code M)	A-30
Long Term Stability	A-31
Dynamic Performance	A-32
Vibration Effect	A-32
3051CFA Physical Specifications	A-32
Electrical Connections	A-32
Process-Wetted Parts	A-32
Non-Wetted Parts	A-32
2051CFA Ordering Information	A-33
Options (Include with selected model number)	A-35

2051CFA Specifications	A-38
2051CFA Performance Specifications	A-38
2051CFA Functional Specifications	A-38
Range and Sensor Limits	A-38
Service	A-38
Protocols	A-38
Overpressure Limits	A-40
Static Pressure Limit	A-40
Burst Pressure Limits	A-40
Temperature Limits	A-40
Humidity Limits	A-41
Volumetric Displacement	A-41
Damping	A-41
Failure Mode Alarm	A-41
Vibration Effect	A-42
2051CFA Physical Specifications	A-42
Electrical Connections	A-42
Non-Wetted Parts for 2051CF	A-42
3095MFA Ordering Information	A-43
3095MFA Specifications	A-48
3095MFA Performance Specifications	A-48
3095MFA Functional Specifications	A-49
3095MFA Physical Specifications	A-52
485 Annubar Primary Element Ordering Information	A-57
Options (Include with selected model number)	A-59
485 Specifications	A-62
485 Performance Specifications	A-62
485 Functional Specifications	A-63
485 Physical Specifications	A-63
585 Annubar Primary Element Ordering Information	A-67
Options (Include with selected model number)	A-69
585 Specifications	A-72
585 Performance Specifications	A-72
585 Functional Specifications	A-73
585 Physical Specifications	A-74
3051SF Dimensional Drawings	A-76
3051CF Dimensional Drawings	A-82
2051CF Dimensional Drawings	A-88
3095MFA Dimensional Drawings	A-91
485 Dimensional Drawings	A-97
585 Dimensional Drawings	A-103

APPENDIX B
Approvals

Hazardous Locations Installations	B-1
Rosemount 3051SFA Product Certifications	B-1
Approved Manufacturing Locations	B-1
European Directive Information	B-1
Ordinary Location Certification for FM	B-2
Hazardous Locations Certifications	B-2
Rosemount 3095MFA Product Certifications	B-6
Hazardous Locations Certifications	B-7
Installation Drawings	B-10
Rosemount 3051SFA ProBar Flowmeter	B-10
Rosemount 3095MFA Mass ProBar Flowmeter	B-10

Annubar Flowmeter Series

Reference Manual
00809-0100-4809, Rev CB
March 2012