

Rosemount™ Wireless Pressure Gauge

with *WirelessHART*® Protocol



NOTICE

This guide provides basic guidelines for Rosemount Wireless Pressure Gauges. It does not provide instructions for configuration, diagnostics, maintenance, service, troubleshooting or intrinsically safe (I.S.) installations. Refer to the Rosemount Wireless Pressure Gauge [Reference Manual](#) for more instruction. The manual and this guide are also available electronically on Emerson.com/Rosemount.

Shipping considerations

The unit is shipped with the battery installed.

Each device contains one "D" size primary lithium-thionyl chloride battery. Primary lithium batteries are regulated in transportation by the U.S. Department of Transportation, and are also covered by IATA (International Air Transport Association), ICAO (International Civil Aviation Organization), and ARD (European Ground Transportation of Dangerous Goods). It is the responsibility of the shipper to ensure compliance with these or any other local requirements. Consult current regulations and requirements before shipping.

⚠ WARNING

Explosions could result in death or serious injury.

- Installation of device in an explosive environment must be in accordance with appropriate local, national and international standards, codes, and practices.
- Ensure device is installed in accordance with intrinsically safe or non-incendive field practices.

Electrical shock can result in death or serious injury.

- Care must be taken during transportation of device to prevent electrostatic charge build-up.
- Device must be installed to ensure a minimum antenna separation distance of 8 in. (20 cm) from all persons.


Process leaks could result in death or serious injury.

- Handle the transmitter carefully.
- Failure to follow safe installation guidelines could result in death or serious injury.**
- Only qualified personnel should install the equipment.

Required equipment



Anti-seize paste or PTFE tape (for NPT threaded connection)



Standard tools, e.g. screwdriver, wrench, pliers



AMS Wireless Configurator version 12.0 or later, or Field Communicator

Contents

What's in the box	3	Installation procedure	5
Optional: Power/device check	4	Troubleshooting	8
Optional: Normal range indication option	4	Product Certifications	9

What's in the box




Wireless Pressure Gauge




Quick Start Guide

The following options are also available and will ship with the Rosemount Wireless Pressure Gauge if ordered.

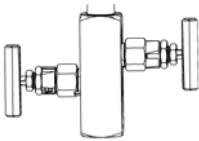

Rosemount 306 Integral Manifold (Model code S5)

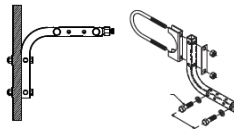

B4 Bracket (Model code B4)



Rosemount 1199 Seal (Model code S1)



Product Certification (Model Codes below)

Q4: Calibration Cert

QG: Calibration Cert and GOST Verification Cert

QP: Calibration Cert and Tamper Evident Seal

Q8: Material Traceability cert per EN 102043.1

Q15: Cert of Compliance to NACE MR0175/ISO 15156 for wetted materials

Q25: Cert of Compliance to NACE MR00103 for wetted materials



Normal Range Indication (Model code LK)

1.0 Optional: Power/device check

The device is designed to be installation-ready. To check device battery prior to installation, perform the following:

1. Perform “Turn on device” on page 6.
2. Slide the ON/OFF switch to the **OFF** position until ready for use.

2.0 Optional: Normal range indication option

Note

The stickers are intended to be installed on the dial only and should not be applied on the inside or outside of the housing cover.

Stickers should be applied in an environment where the ambient temperature is above 50 °F (10 °C).

-
1. Modify each of the stickers to desired size prior to proceeding to step 2.
 2. Remove housing cover.
 3. Slide ON/OFF switch to the OFF position and wait for LED to stop flashing.
 4. Gently move the needle in the clockwise direction until it is pointing at the Red X.

Note

Use caution as the electronics assembly is connected to the needle.

-
5. Remove any debris on the dial, so it does not become trapped under the sticker.
 6. Peel back the white paper backing of the sticker.
 7. Slowly lower the sticker onto the surface of the dial in the desired location and rub it in place firmly. Repeat steps 6 and 7 until desired indication locations are set.


Note

Moving the sticker after initial contact is not recommended as this decreases the amount of adhesive on the back of the sticker.


-
8. Slide ON/OFF switch to the ON position.
 9. Replace housing cover.

3.0 Installation procedure

Step 1: Seal and protect threads

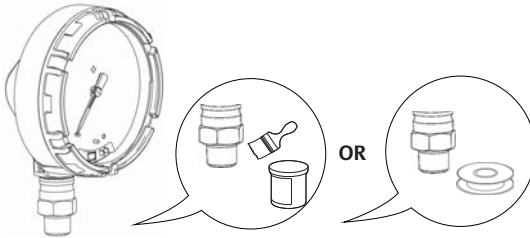

Step 2: Mount device

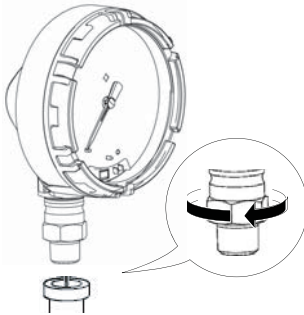

Note

Use wrench on flats, not on housing.


Mounting orientation

The low side pressure port (atmospheric reference) on the process pressure gauge is located in the neck of the device behind the housing. The vent path is between the housing and sensor (see [Figure 1](#)).

CAUTION

Keep the vent path free of any obstruction, including but not limited to paint, dust, and lubrication by mounting the device so the process can drain away.

Figure 1. Low Side Pressure Port

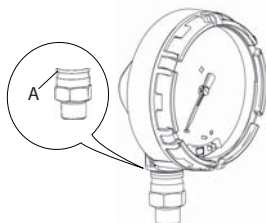


A. Low side pressure port (atmospheric reference)

Step 3: Turn on device

Check to ensure the device and battery are working properly.

1. Twist the cover counterclockwise to remove it.
2. Slide the OFF/ON switch to the **ON** position to initiate the power sequence.

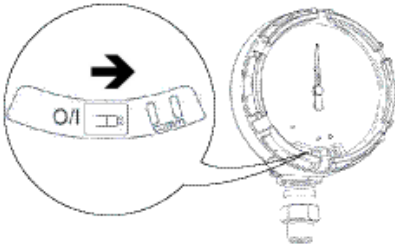

Note


During the power sequence, the dial tests full range of motion and LED flashes amber.

3. Once the power sequence ends, verify the LED flashes green.

Note

The LED may display several colors; see [Figure 1](#) in “Troubleshooting” on page 8 for device statuses.

Step 4: Connect to device

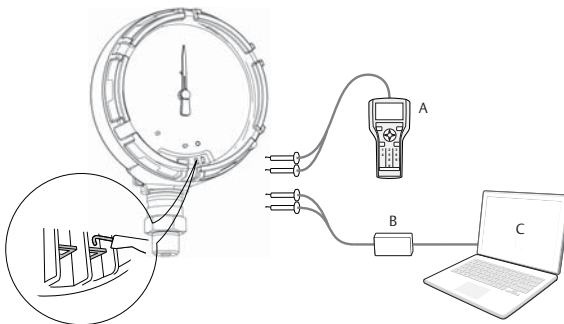

A. Field Communicator B. HART® Modem C. AMS Wireless Configurator

Field Communicator

1. Turn on the Field Communicator.
2. From the *Main* menu, select the HART symbol.

AMS Wireless Configurator

1. Start AMS Wireless Configurator.
2. From the *View* menu, select **Device Connection View**.
3. Double click the device under the HART modem.

Step 5: Eliminate mounting effects

Devices are factory-calibrated. Once installed, it is recommended to perform this step to eliminate potential error caused by mounting position or static pressure. Instructions for using a Field Communicator are listed below.

Note

See the Rosemount Wireless Pressure Gauge [Reference Manual](#) for the following:

- Using AMS Wireless Configurator
- Sensor trim function on absolute gauge

1. Vent the device.
2. Connect the Field Communicator.
3. From the *HOME* screen, enter the HART Fast Key sequence.

Device dashboard Fast Keys	2, 1, 1
----------------------------	---------

4. Follow the commands to perform the procedure.

Step 6: Activate wireless

Do not activate wireless until Smart Wireless Gateway is installed and functioning properly; toggling off and on reduces battery life.

Note

If Network ID and Join Key is specified at order entry, then the device will automatically search and connect to the wireless network when powered on.

Join device to network

1. Obtain Network ID and Join Key for the wireless network (available in wireless gateway).
2. From the *HOME* screen, enter the HART Fast Key sequence.

Device dashboard Fast Keys	2, 1, 2
----------------------------	---------

3. Follow the commands to perform the procedure.
4. Select **Overview>Status**.
5. Verify the communication status displays *Connected*.

Note

Joining the device to the network could take several minutes.





4.0 Troubleshooting

This section provides information for basic troubleshooting. See the reference manual (document number 00809-0100-4045) for advanced troubleshooting .

Device status

The flashing LED indicates device status using the colors described in [Table 1](#).

Table 1. Status Descriptions

LED color		Device status
	Green	Functioning properly
	Amber	Battery is low, battery replacement recommended
	Red	Battery replacement required OR Device is malfunctioning
	No color	No power, verify ON/OFF switch is in "on" position

Pressure measurement

If the mounting effects have not been eliminated after completing [Step 5](#), perform this alternative procedure for verifying the pressure value.

1. From the *HOME* screen, enter the HART Fast Key sequence.

Device dashboard Fast Keys	2, 2, 1, 1, 1
-----------------------------------	---------------

2. Follow the commands to perform the procedure.

Wireless connectivity

If the device has not joined to the network after power up, verify the following:

- Active Advertising has been enabled on the Smart Wireless Gateway
- Network ID and Join Key in the device match the Network ID and Join Key of the Gateway

The Network ID and Join Key may be obtained from the Smart Wireless Gateway on the Setup > Network > Settings page on the web interface .

5.0 Product Certifications

Rev: 2.0

5.1 European Directive Information

A copy of the EU Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EU Declaration of Conformity can be found at www.emerson.com.

5.2 Telecommunication compliance

All wireless devices require certification to ensure that they adhere to regulations regarding the use of the RF spectrum. Nearly every country requires this type of product certification. Emerson™ is working with governmental agencies around the world to supply fully compliant products and remove the risk of violating country directives or laws governing wireless device usage.

5.3 FCC and IC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: This devices may not cause harmful interference, this devices must accept any interference received, including interference that may cause undesired operation. This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.

This device complies with Industry Canada license-exempt RSS-247. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modification to the equipment not expressly approved by Emerson could void the user's authority to operate the equipment.

Cet appareil est conforme à la Partie 15 de la réglementation FCC. Son fonctionnement est soumis aux conditions suivantes: Cet appareil ne doit pas causer d'interférences nuisibles. Cet appareil doit accepter toute interférence reçue, incluant toute interférence pouvant causer un fonctionnement indésirable. Cet appareil doit être installé pour assurer une distance minimum de l'antenne de séparation de 20 cm de toute personne.

Cet appareil est conforme à la norme RSS-247 Industrie Canada exempt de licence. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris les interférences pouvant causer un mauvais fonctionnement du dispositif.

Les changements ou les modifications apportés à l'équipement qui n'est pas expressément approuvé par Rosemount Inc. pourraient annuler l'autorité de l'utilisateur à utiliser cet équipement.

5.4 Ordinary Location Certification from CSA

The product has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by CSA, a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

5.5 Installing in North America

The US National Electrical Code (NEC) and the Canadian Electrical Code (CEC) permit the use of Division marked equipment in Zones and Zone marked equipment in Divisions. The markings must be suitable for the area classification, gas, and temperature class. This information is clearly defined in the respective codes.

5.6 USA

15 U.S.A. Intrinsically Safe (IS)

Certificate: [CSA] 70047656

Standards: FM 3600 – 2011, FM 3610 – 2010, UL Standard 50 – Eleventh Edition, UL 61010-1 – 3rd Edition, ANSI/ISA-60079-0 (12.00.01) – 2013, ANSI/ISA-60079-11 (12.02.01) – 2013, ANSI/IEC 60529 – 2004

Markings: IS CL I, DIV 1, GP A, B, C, D T4;
Class 1, Zone 0, AEx ia IIC T4 Ga;
T4 (-40 °C ≤ Ta ≤ +70 °C)
when installed per Rosemount drawing 00G45-1020;
Type 4X; IP66/67;

Special Conditions for Safe Use (X):

1. Do not replace battery when explosive atmosphere is present.
2. Use only 00G45-9000-0001 batteries.
3. The surface resistivity of the housing is greater than $1G\Omega$. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.
4. Substitution of components may impair intrinsic safety.

5.7 Canada

16 Canada Intrinsically Safe (IS)

Certificate: [CSA] 70047656

Standards: CAN/CSA C22.2 No. 0-10, CAN/CSA C22.2 No. 94-M1991 (R2011), CAN/CSA-60079-0-11, CAN/CSA-60079-11-14, CSA Std C22.2 No. 60529-05, CAN/CSA-C22.2 No. 61010-1-12

Markings: Intrinsically Safe for Class I, Division 1, Groups A, B, C, D T4;
Ex ia IIC T4 Ga
T4 (-50 °C ≤ Ta ≤ +70 °C)
when installed per Rosemount drawing 00G45-1020;
Type 4X; IP66/67;

Special Conditions for Safe Use (X):

1. Do not replace battery when explosive atmosphere is present.
Ne pas remplacer les accumulateurs si une atmosphère explosive peut être présente.
2. Use only 00G45-9000-0001 batteries.
Utiliser uniquement des accumulateurs 00G45-9000-0001.
3. The surface resistivity of the housing is greater than $1G\Omega$. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.

La résistance de surface du boîtier est supérieure à un gigaohm. Pour éviter l'accumulation de charge électrostatique, ne pas frotter ou nettoyer avec des produits solvants ou un chiffon sec.


4. Substitution of components may impair intrinsic safety.
La substitution de composants peut compromettre la sécurité intrinsèque.

5.8 Europe

11 ATEX Intrinsic Safety

Certificate: Baseefa16ATEX0005X

Standards: EN 60079-0: 2012 + A11: 2013, EN 60079-11: 2012

Markings:  II 1 G Ex ia IIC T4 Ga, T4 (-40 °C ≤ Ta ≤ +70 °C)
IP66/67;

Special Conditions for Safe Use (X):

1. The plastic enclosure may constitute a potential electrostatic ignition risk and must not be rubbed or cleaned with a dry cloth.
2. The measured capacitance between the equipment enclosure and metallic inline sensor module is 4.7pF. This must be considered only when the WPG is integrated into a system where the process connection is not grounded.
3. Do not change the battery when an explosive atmosphere is present.
4. Only replace battery with Rosemount Part No. 00G45-9000-0001.

5.9 International

17 IECEx Intrinsic Safety

Certificate: IECEx BAS 16.0012X

Standards: IEC 60079-0: 2011, IEC 60079-11: 2011

Markings: Ex ia IIC T4 Ga, T4 (-40 °C ≤ Ta ≤ +70 °C)
IP66/67;

Special Conditions for Safe Use (X):

1. The plastic enclosure may constitute a potential electrostatic ignition risk and must not be rubbed or cleaned with a dry cloth.
2. The measured capacitance between the equipment enclosure and metallic inline sensor module is 4.7pF. This must be considered only when the WPG is integrated into a system where the process connection is not grounded.
3. Do not change the battery when an explosive atmosphere is present.
4. Only replace battery with Rosemount Part No. 00G45-9000-0001.

5.10 Brazil

12 INMETRO Intrinsic Safety

Certificate: UL-BR 16.0826X

Standards: ABNT NBR IEC 60079-0:2008 + Errata 1:2011, ABNT NBR IEC 60079-11:2009

Markings: Ex ia IIC T4 Ga, T4 (-40 °C ≤ Ta ≤ +70 °C)

Special Conditions for Safe Use (X):

See certificate for special conditions

5.11 Japan

I4 TIIS Intrinsic Safety

Certificate: TC22068X

Markings: Ex ia IIC T4 Ga, T4 (-40°C ≤ Ta ≤ +70°C)

Special Conditions for Safe Use (X):

See certificate for special conditions

5.12 EAC – Belarus, Kazakhstan, Russia

IM Technical Regulation Customs Union (EAC) Intrinsic Safety




Certificate: TC RU C-US.AA87.B.00372

Markings: 0Ex ia IIC T4 Ga X, T4 (-40°C ≤ Ta ≤ +70°C) IP66/67;

Special Conditions for Safe Use (X):

See certificate for special conditions

Figure 2. Rosemount Wireless Pressure Gauge Declaration of Conformity

	
<h2>EU Declaration of Conformity</h2>	
<p>No: RMD 1108 Rev. E</p>	
<p>We,</p>	
<p>Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317-9685 USA</p>	
<p>declare under our sole responsibility that the product,</p>	
<p>Models WPG & SPG: Wireless Pressure Gauge & Smart Pressure Gauge</p>	
<p>manufactured by,</p>	
<p>Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317-9685 USA</p>	
<p>to which this declaration relates, is in conformity with the provisions of the European Community Directives, including the latest amendments, as shown in the attached schedule.</p>	
<p>Assumption of conformity is based on the application of the harmonized standards and, when applicable or required, a European Community notified body certification, as shown in the attached schedule.</p>	
	<p>Vice President of Global Quality</p>
<p>(signature)</p>	<p>(function name - printed)</p>
<p>Chris LaPoint</p>	<p>1-Feb-19</p>
<p>(name - printed)</p>	<p>(date of issue)</p>
<p>Page 1 of 3</p>	



EU Declaration of Conformity

No: RMD 1108 Rev. E



EMC Directive (2014/30/EU)

Models WPG & SPG

Harmonized Standards:
EN 61326-1: 2013

Radio Equipment Directive (RED) (2014/53/EU)

Model WPG (Wireless Pressure Gauge only)

Harmonized Standards:
EN 300 328 V2.1.1
EN 301 489-1 V2.2.0
EN 301 489-17: V3.2.0
EN 61010-1: 2010
EN 62479: 2010

ATEX Directive (2014/34/EU)

Models WPG & SPG

Baseefa16ATEX0005X - Intrinsic Safety Certificate
Equipment Group II Category 1 G
Ex ia IIC T4 Ga, T4(-40°C ≤ Ta ≤ +70°C)

Harmonized Standards:
EN 60079-0: 2012 + A11: 2013
EN 60079-11: 2012



EU Declaration of Conformity

No: RMD 1108 Rev. E

ATEX Notified Bodies

SGS FIMCO OY [Notified Body Number: 0598]
P.O. Box 30 (Särkiniementie 3)
00211 HELSINKI
Finland

ATEX Notified Body for Quality Assurance

SGS FIMCO OY [Notified Body Number: 0598]
P.O. Box 30 (Särkiniementie 3)
00211 HELSINKI
Finland

含有China RoHS管控物质超过最大浓度限值的部件型号列表 Rosemount SPG
List of Rosemount SPG Parts with China RoHS Concentration above MCVs

部件名称 Part Name	有害物质 / Hazardous Substances					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr +6)	多溴联苯 Polybrominated biphenyls (PBB)	多溴联苯醚 Polybrominated diphenyl ethers (PBDE)
电子组件 Electronics Assembly	X	O	O	O	O	O
壳体组件 Housing Assembly	O	O	O	O	O	O
传感器组件 Sensor Assembly	X	O	O	O	O	O
电池组件 Battery Assembly	X	O	O	O	O	O

本表格系依据SJ/T11364的规定而制作。

This table is proposed in accordance with the provision of SJ/T11364.

O: 意为该部件的所有均质材料中该有害物质的含量均低于GB/T 26572所规定的限量要求。

O: Indicate that said hazardous substance in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

X: 意为在该部件所使用的所有均质材料里，至少有一类均质材料中该有害物质的含量高于GB/T 26572所规定的限量要求。

X: Indicate that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.



Global Headquarters

Emerson Automation Solutions

6021 Innovation Blvd.
Shakopee, MN 55379, USA
+1 800 999 9307 or +1 952 906 8888
+1 952 949 7001
RFQ.RMD-RCC@Emerson.com

North America Regional Office

Emerson Automation Solutions

8200 Market Blvd.
Chanhassen, MN 55317, USA
+1 800 999 9307 or +1 952 906 8888
+1 952 949 7001
RMT-NA.RCCRFQ@Emerson.com

Latin America Regional Office

Emerson Automation Solutions

1300 Concord Terrace, Suite 400
Sunrise, FL 33323, USA
+1 954 846 5030
+1 954 846 5121
RFQ.RMD-RCC@Emerson.com

Europe Regional Office

Emerson Automation Solutions

Neuhofstrasse 19a P.O. Box 1046
CH 6340 Baar
Switzerland
+41 (0) 41 768 6111
+41 (0) 41 768 6300
RFQ.RMD-RCC@Emerson.com

Asia Pacific Regional Office

Emerson Automation Solutions

1 Pandan Crescent
Singapore 128461
+65 6777 8211
+65 6777 0947
Enquiries@AP.Emerson.com

Middle East and Africa Regional Office

Emerson Automation Solutions

Emerson FZE P.O. Box 17033
Jebel Ali Free Zone - South 2
Dubai, United Arab Emirates
+971 4 8118100
+971 4 8865465
RFQ.RMTMEA@Emerson.com



[Linkedin.com/company/Emerson-Automation-Solutions](https://www.linkedin.com/company/Emerson-Automation-Solutions)



[Twitter.com/Rosemount_News](https://twitter.com/Rosemount_News)



[Facebook.com/Rosemount](https://www.facebook.com/Rosemount)



[Youtube.com/user/RosemountMeasurement](https://www.youtube.com/user/RosemountMeasurement)



[Google.com/+RosemountMeasurement](https://www.google.com/+RosemountMeasurement)

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. Rosemount and Rosemount logotype are trademarks of Emerson. All other marks are the property of their respective owners. © 2019 Emerson. All rights reserved.